
 
 
## **CRANKSHAFT TESTER**



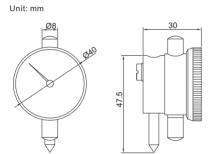

 


 


 
dial indicator

balance block


extension rods







anvils

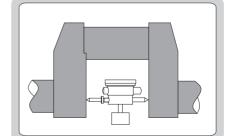

- To test crankshaft deflection
- The balance block is mounted on the back of dial indicator to keep the dial indicator facing up

	Code	Range	Dial indicator range	Graduation	Extension rods	Accuracy
I	2841-300	60-300mm	3mm	0.01mm	16mm, 32mm, 64mm, 128mm	±0.016mm
	2841-500	60-500mm	3mm	0.01mm	16mm, 32mm, 64mm, 96mm, 128mm, 192mm	±0.016mm